

Installation Instructions

Oppo UDP-203

regionfree modification



Figure 1

1

Disconnect the mains cable, and remove the top plate of the player. Note the yellow marked point where the cable must be inserted. Only one cable needs to be inserted.

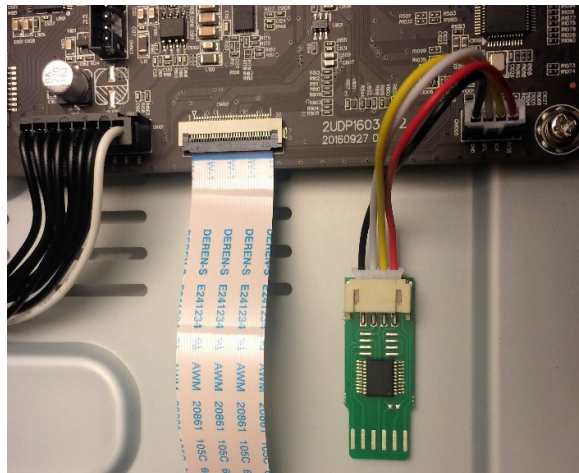


Figure 2

2

Attach the board to the bottom of the chassis. The board has double-adhesive tape for this.

3

Now the kit is ready for operation. This is how to use the kit:

By default, your bluray player is region free for DVD. To set the bluray region to A, B or C, please do the following:

1. Power on the player without any disc inserted. The screen will after a while show "No Disc".
2. About 4 seconds after the "No Disc" or "HOME MENU" displayed, press DIMMER, DIMMER, DIMMER, MUTE and then the region code. 1 for A, 2 for B, and 3 for C.
3. Power off your player. When started up again, the region code has changed.

The region code selection must be done within 20 seconds.

To select a specific DVD region, press DIMMER , DIMMER , DIMMER , PURE AUDIO, x
Where x is the DVD region 0 to 6. Default is 0 (0 = all regions / region free)

